 
 


5. Activate Spy Mode



(A) Screen-off Disguise Display



(B) Cellphone Power-on Disguise Display

- There are two different covert display originally designed to apply on this model (A) Screen-off (B) Cellphone power-on
- Both can be accessed by pressing instant key.
- To activate instant key access. Press Power button.
- Go to Main Menu > Settings > Spy Mode > On
- Spy Mode needs to select On. Spy Mode is activated.
- Press Menu + * button to change to screen-off display.
- Press Menu + # button to change to Cellphone power-on display.
- Note that use the navigation key to change the setting. UP/DOWN /RIGHT/LEFT to change cursor direction. Push in to SET the selection.

6. Taking Snapshot



- Record directly without disguise, go to Main Menu > Record > Preview. Captured images will be shown on screen.
- Press 3 button to take snapshot.

(4)

7. File Retrieval

- USB Cable Connection:
 - Connects Micro USB Cable Hub to DVR.
 - Connects Mini USB cable to Micro USB Cable Hub to computer.
 - DVR is read as External Storage from computer.
 - Access the external storage, find the folder named Record.
 - Operates file applications in this folder.
- Card Reader:
 - Remove MicroSD card from card slot.
 - Connects card reader to computer.
 - Insert MicroSD card into card reader.
 - Access the card reader folder.
 - Operates file applications in this folder.

8. File Playback

- Video File Playback:
 - Go to Main Menu > Video
 - Press Navigation Button to access record folder
 - Press Navigation Button to playback video.
 - Move Navigation Button to right to fast forward.
 - Move Navigation Button to left to play backward.
 - Press ESC button to move to previous directory.
- Image File Playback:
 - Go to Main Menu > Images
 - Press Navigation Button to zoom in and zoom out.
 - Move Navigation Button UP and Down to view other files.
 - Press Menu Button to edit Slideshow option.

9. Changing Video System

- Go to directory: Main Menu > Setting > Digital Cam NTSC/PAL
- Press Navigation Button to access selection.
- Move Navigation Button UP and Down to change setting.
- Move Navigation Button to left to exit setting edit.
- Press ESC Button to exit Setting Menu page.

(5)

10. Continuous Recording

- Go to directory: Main Menu > Record > Preview
- Captured images will show on screen display.
- Switch to REC position to start recording.
- Device will start recording continuously when REC is switched.
- Switch to STOP position to stop recording.

11. Pre-event Recording

- Go to directory: Main Menu > Record > Pre-event
- Captured images will show on screen display.
- Switch to REC position to start recording.
- Device will automatically start recording 30 seconds ago before REC is switched.
- Switch to STOP position to stop recording.

12. Motion Detect Recording

- Go to directory: Main Menu > Settings > Motion Detection
- Make changes on Motion Detect Level, Motion Detect Duration, Motion Detect Zone, and Overwrite settings.
- Go to directory: Main Menu > Settings > Recording Mode.
- Select Motion Detect as default recording mode.
- Switch to REC position to start recording.
- Switch to Stop position and press ESC button three second long to stop.

13. Password Protection


- Power On Password:
 - Go to directory: Main Menu > Setting > Set Power On Password
 - Use Navigation Button to change password character.
 - Go to directory: Main Menu > Setting > Power On Password > On
- USB Connection Password:
 - Go to directory: Main Menu > Setting > Set USB Connection Password
 - Use Navigation Button to change password character.
 - Go to directory: Main Menu > Setting > USB Connection Password > On

(6)

14. Timer Recording


- Go to directory: Main Menu > Setting > Timer Recording
- Select any icon and edit timer settings.
- Move to the end of the menu page.
- Change Setting to On.
- Turn the DVR power off.
- DVR will start recording in respond to timer setting.

15. Illustration

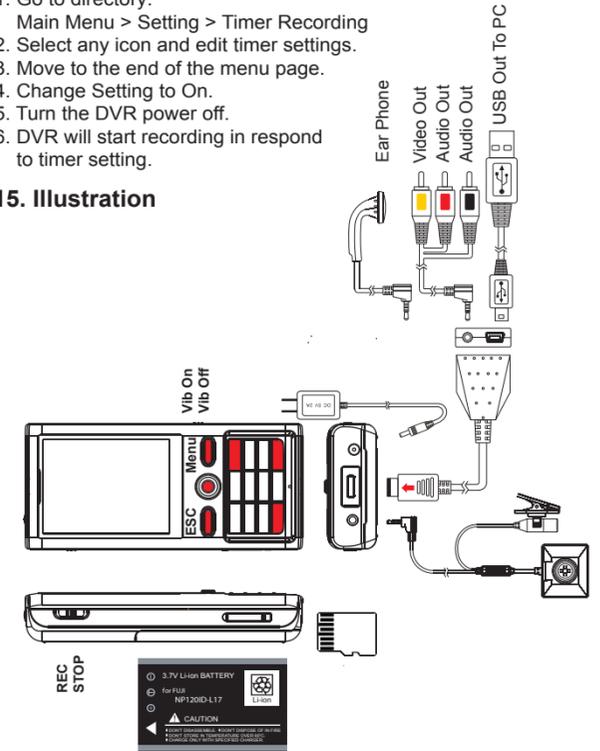

(7)


PV-900HD Cellphone Design Portable DVR Quick Guide

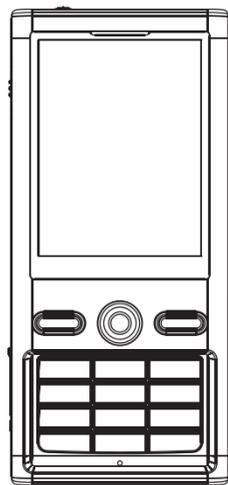

Law Enforcement Products Manufacturer
LawMate

V1.0


1. Name and Parts

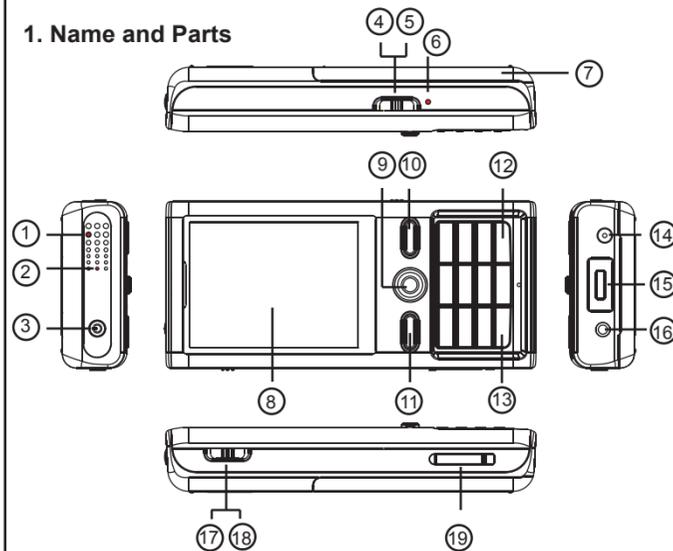

- | | |
|-------------------------|-----------------------------|
| 1. Camera Lens | 11. Escape Button |
| 2. Microphone | 12. Volume Up Button |
| 3. Power Button | 13. Volume Down Button |
| 4. Vibration On Switch | 14. DC Power Adapter Socket |
| 5. Vibration Off Switch | 15. Micro USB Port |
| 6. Reset Button | 16. AV Input Socket |
| 7. Battery Tray | 17. Stop Recording Switch |
| 8. 2.46" LCD Display | 18. Recording Switch |
| 9. Navigation Key | 19. Micro SD Card Slot |
| 10. Menu Button | |


(1)

2. Package Content

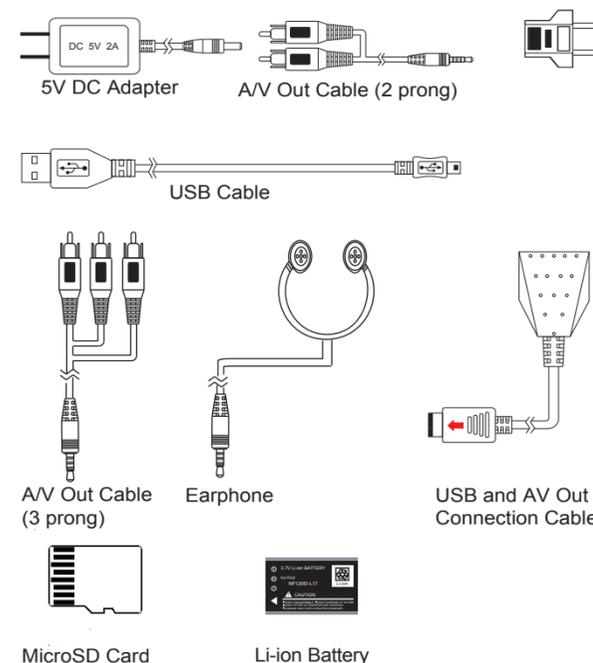


(2)

3. Charging Battery

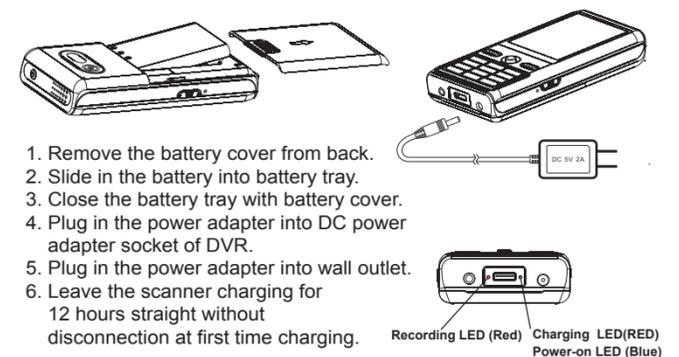

4. Insert MicroSD Card

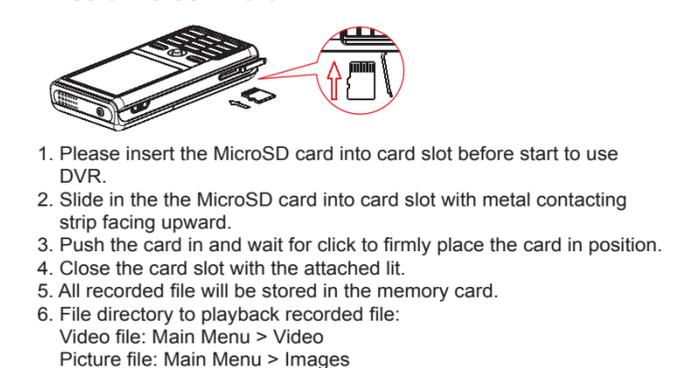

(3)