



1. Names and Parts

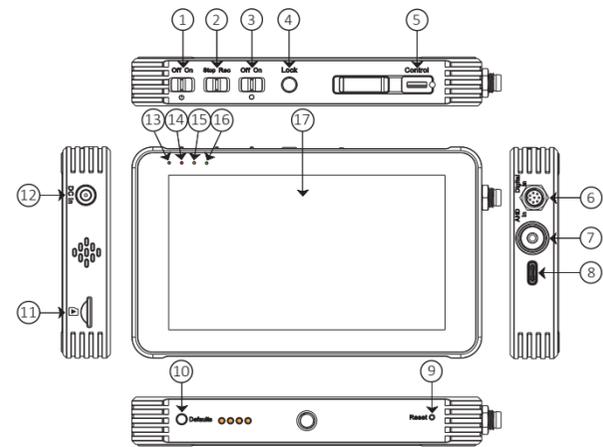

- | | | |
|------------------------|----------------------|---------------------------------|
| 1. Power Button | 7. AHD Cam In | 13. Power - Blue LED |
| 2. Stop/Rec Button | 8. USB Port | 14. Rec. - Red LED |
| 3. Wi-Fi On/Off Switch | 9. Reset Button | 15. Wi-Fi - Orange LED |
| 4. Screen Lock | 10. Defaults Button | 16. Device Charging - Green LED |
| 5. Controller Port | 11. Memory Card Slot | 17. 5" Touch Screen |
| 6. Digital Cam In | 12. DC5V 3A In | |

1

2. Package Content

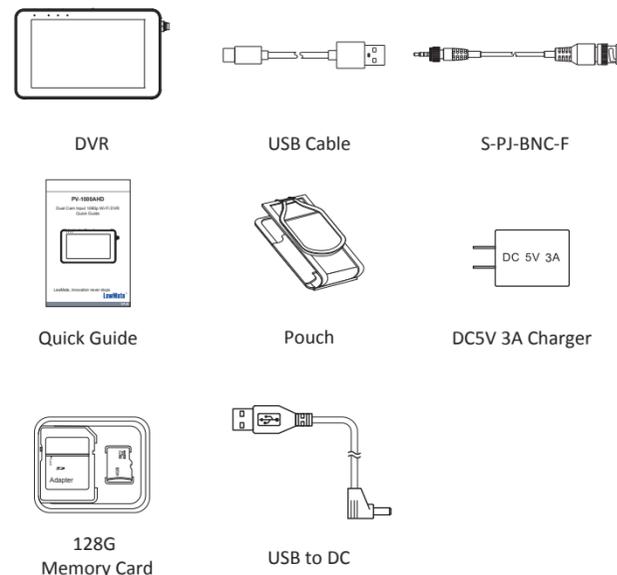


- ※ Note: Only use the supplied AC/DC charger to charge the DVR.
- ※ Do not remove serial number sticker! Warranty is invalid if the sticker is tampered.
- ※ This product is for Law Enforcement and Home Security Use Only!

2

3. Charge the Battery

Plug the supplied DC 5V 3A charger to an AC wall outlet, then connect the other end of USB to DC cable to the DC IN socket on the side of PV-1000AHD. The green LED indicator will turn on when the battery is charging. The green LED will turn off when battery is fully charged.

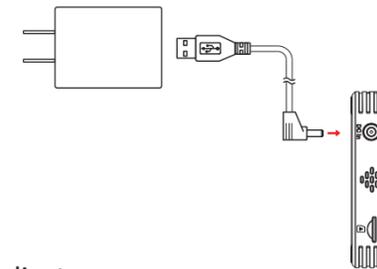


4. LED Indicators

LED Indicators	Device Status
Blinking Blue LED	Low Battery
Solid Blue LED	Device On
Blinking Orange LED	Searching Wi-Fi
Solid Orange LED	Wi-Fi Connected
Solid Green LED	Device Charging
Blinking Red LED	Memory Card Full
Solid Red LED	Recording On

3

4. PV-1000AHD Connection Illustration

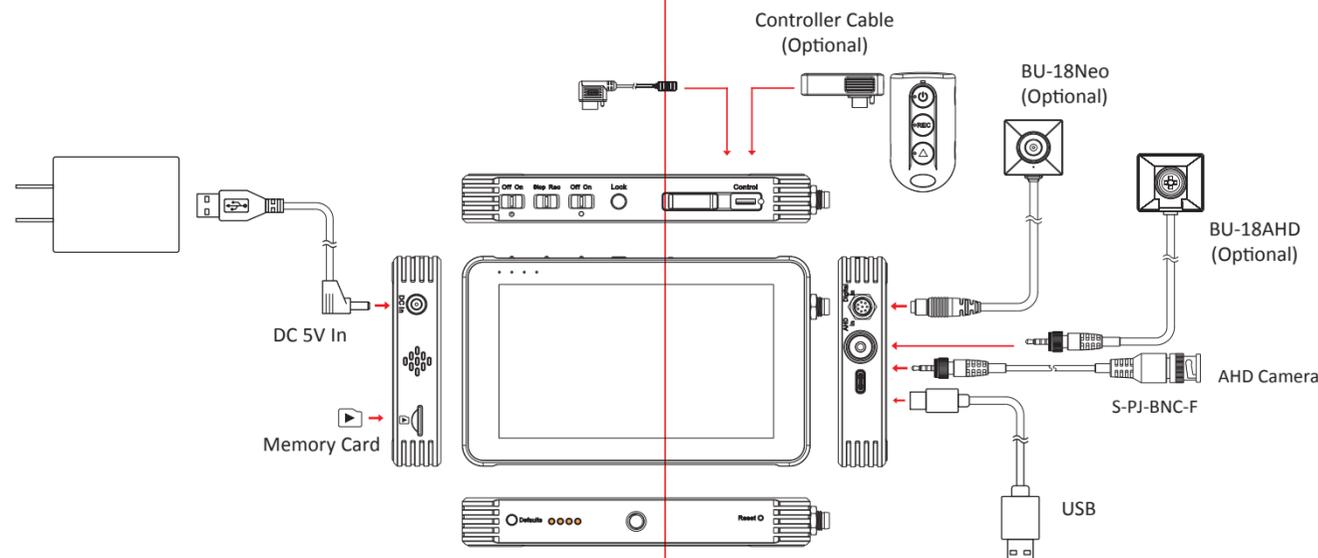

Note: BU-18Neo is the only compatible digital camera for PV-1000AHD.

4

5

PV-1000AHD Dual Cam Input 1080p Wi-Fi DVR Quick Guide



LawMate, innovation never stops

