

The manual of the devices Case Ultra-06/N

1. Place the device on the conference table, desk, floor. Aim the suitcase with emitters towards the person you want to jam the voice recorder with. The recommended distance Case Ultra-06/N from the person whose recording device will be jam is 1 to 10m.

Please remember that on the effectiveness of the work of the device has influence: the way of the location device and the forces of the intensity of the voice of the protected person - the voice weaker and quiet = the better effectiveness.



2. The switching on of the device:

a) Press the switch. The switch will be illuminated by an LED - the device is ready for operation.

b) Turning the device on and off is done by pressing the green button on the remote control.

Turning on the device signals double blinking of the red signaling LED of the suitcase, turning off - the diode blinks once.



3. The charging a battery.

After connecting the AC adapter to the Case Ultra-06/N device, the charging process begins.

The following LEDs will light up in the line:

- LED red flashing - meaning completely discharged accumulator
- LED yellow - fragmentarily charged an accumulator
- LED green – the accumulator charge
- LED blue flashing – the final phase of the charging

The accumulator fully charged when all diodes will fade LED.

The time of the charging battery about 8 hours

The state of charging an accumulator:

- the lighting green diode LED – the battery loaded, the energy will be enough for about 8-9 working hours
- the lighting yellow diode LED – the energy it stayed on about 2 hour of the work.
- the flashing red diode LED – the battery discharged, immediately to connect the AC adapter.

4. Conditions of the safety:

- a) do not open the device, breaking the seals involves immediate loss of the warranty.
- b) do not approach the device while working at a distance of less than 0.5 meters.
- c) during the work next door to device should not be found animals.

5. The service and the repair: The manufacturer provides a 24 month warranty.

6. Features:

- author's algorithm of generating of the digital ultrasonic signal jamming.
- remote enable wireless on / off using a miniature remote control
- quiet work - it does not give the audible and burdensome sound
- signalling of the charging and the state of charging an accumulator.
- simple services and the exploitation.

7. Specifications:

- maximum range: depending on the kind of the dictaphone, the bugging from 1 to 30 metres
- directivity of the work jammer CASE ULTRA-06/N in the horizontal plane and vertical 80°
- power supply: the built-in effective battery + the power supply 110-230 V
- remote control - switching on and off, the range of the work about 40 meters
- wireless remote control: work frequency 433.92 MHz in the ISM band
- working times from the battery about 8-9 hours
- **maximum continuous operating time 3 hours, break time 30 minutes.**
- battery charging time 8 hours
- weight: 7,5 kg, the range of the work in the temperature from 0 ° to + 40 ° C (32-104 Fahrenheit)
- size : length 465mm. height 350mm. thickness 125mm.
- warranty: 24 months

