

## The manual of the devices Tower-A/N

1. Place the device on the conference table or desk. The recommended distance Tower-A from the interlocutor whose recording device will be jammings is 0.5 to 3 meters.

Please remember that on the effectiveness of the work of the device has influence: the way of the location device and the forces of the intensity of the voice of the protected person - the voice weaker and quiet = the better effectiveness.



### 2. The switching on-of the device - ( the main on-switch).



a) Press the switch. The switch will be illuminated by an LED - the device is ready for operation.

b) the device is powered on and off by pressing the green button on the remote control  
turning on the device signals double flashing of the red diode in the signal line,  
turning off the power supply - the red LED flash once

### 3. Diodes signalling the state of charging an accumulator.



#### 4. The socket of the charging of the device.



#### The charging a battery.

After connecting the AC adapter to the Tower-A device, the charging process begins.

The following LEDs will light up in the line:

- LED red flashing - meaning completely discharged accumulator
- LED yellow - fragmentarily charged an accumulator
- LED green – the accumulator charge
- LED blue flashing – the final phase of the charging

The accumulator fully charged when all diodes will fade LED. The time of the charging battery about 5 hours

#### The state of charging an accumulator:

- The lighting green diode LED – the battery loaded, the energy will be enough for about 3 working hours
- The lighting yellow diode LED – the energy it stayed on about 1 hour of the work.
- The flashing red diode LED – the battery discharged, immediately to connect the AC adapter.

#### 5. Conditions of the safety:

- a) do not open the device, breaking the seals involves immediate loss of the warranty.
- b) do not approach the device while working at a distance of less than 0.5 meters.
- d) during the work next door to device should not be found animals.

**6. The service and the repair:** The manufacturer provides a 24-month warranty.

#### 7. Features:

- proprietary algorithm for generating digital jamming of the ultrasonic signal.
- remote radio on - switching off using the remote control
- quiet operation - no audible and bothersome sound
- battery charge indicator and status indicator.
- the simple services and the exploitation.

#### 8. Specifications:

- range: depending on the eavesdropping one ought to accept the area about 30-40 m<sup>2</sup>
- directivity of the work of the device TOWER-A/N in the ground plane 360 °  
in the vertical plane 105 °
- control by means of a wireless remote control - switching on and off, working range about 20 meters.
- wireless remote control: operating frequency 433.92 MHz in the ISM band
- power supplies: the built-in internal accumulator and the power supply 110-230V
- **maximum continuous operating time 3 hours, break time 30 minutes.**
- work times from the built-in accumulator about 3 hours
- time of the battery charging 5 hours
- weight: 5 kg, range of work in the temperature from 0 ° to + 40 ° C ( 32-104 Fahrenheit )
- size : height 37 cm., diameter 16 cm.

