

iStranger

Voice Changer



The iStranger is a unique voice changing system designed to be compatible with most existing cell phones. Gone are the days of landline telephones. In the modern era of smartphones comes a new era of voice changer. Simply insert the voice changer's headphone jack into your cellphone, hold the iStranger to your ear like a phone receiver (see picture) and speak normally. The two voice changing modes, LOW and HIGH allow for greater disguise of different voice pitches so the user can go unrecognized by the call receiver. The single wire design makes the iStranger easy to connect so that setup is simplistic and straight forward.

The iStranger's rechargeable battery offers 6 hours of battery life, totalling nearly a full 8 hour shift of voice changing power. The system only turns on while the phone is in use, preserving the user's battery life for when they need it most. Designed for portability, the durable metal housing and rubber edge will withstand normal wear and tear better than most products. Simple and powerful, this is a true voice changing companion.

Features

- Changes your voice in the two working modes – with a “low” and a “high” tone
- Works with all modern smart phones which have a 4-contact, 3.5 mm connector (such as Apple, Samsung, HTC and others)
- Built-in rechargeable battery with 6 hour reserve
- Functions as a headset, i.e. conversations are conducted via the device
- Recharged by USB (cable supplied)
- Automatically goes into sleep mode when inactive

Compatibility:

The iStranger was designed to function with smartphones, such as those from Apple, Samsung, HTC and other manufacturers. To be compatible, the phone must have a 3.5mm phone jack that supports a 4-contact male connector (reference picture below). If you are unsure about which type your phone accepts, please consult its user manual or specification sheet. Alternatively, if the phone came with a microphone or headset, please count the number of divided sections. If that connector has 3 sections the voice changer will not be compatible with your phone. If that connector has 4 sections the voice changer will work with your phone. You may reference the picture below containing a 3 and 4 section male phone jack to determine the necessary connection type compatible with the iStranger.

Device modes:

The voice changer has 2 modes, “Low” and “High”. “Low” mode is indicated by a Red LED. “High” mode is indicated by a Blue LED. By pressing the “Mode” button once the device will switch between Low and High, confirmed by the change in LED color. You may change modes before or during use.

