



1. Name and Parts

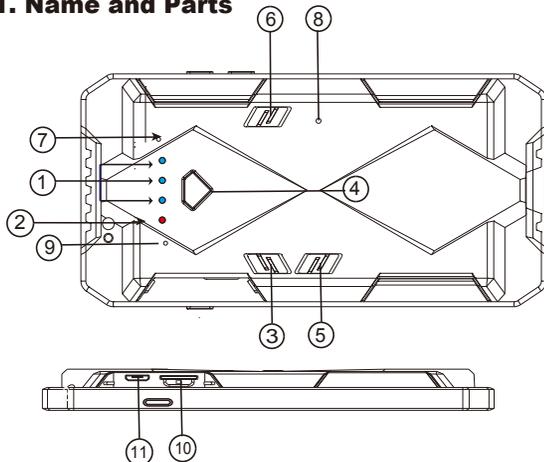

1. Battery Capacity (blue) LED indicator
2. Record (red) LED / Wi-Fi (orange) LED
3. Power on/off Switch
4. LED Display on/off Button
5. Zoom in/out Switch (4X)
6. Wi-Fi on/off Switch
7. Reset Key
8. Default Key
9. Microphone
10. Memory Card Slot
11. USB Port

1

2. Package Content

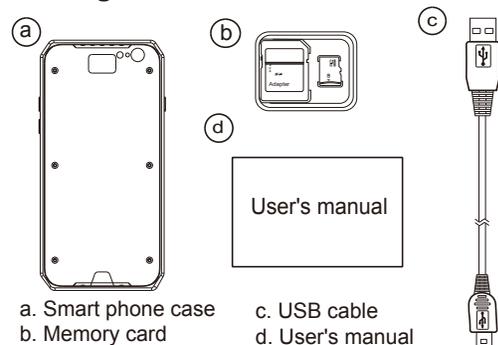


3. LED Indicators

LED Indicators	Battery Capacity
Three blue LED shining	65~100%
Two blue LED shining	35~ 65%
One blue LED shining	5% ~ 35%
One Blinking blue LED	No power
Three flashing blue LED	Device charging

LED Indicators	Device Status
Solid Red LED	Recording on
Blinking orange LED	Searching Wi-Fi
Solid orange LED	Wi-Fi connected


2

4. Assembly for Smartphone 6

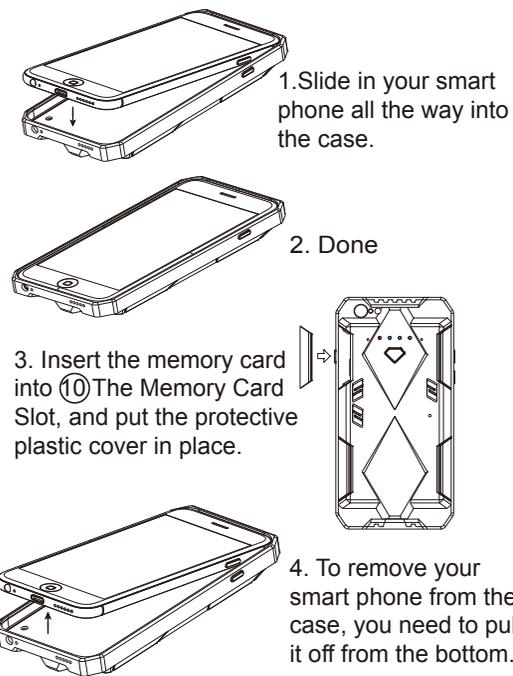


3

5. Charging the Battery

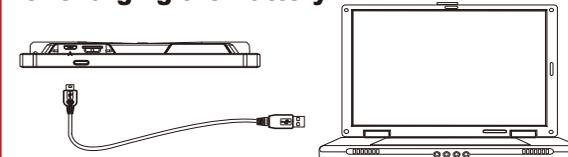

- Connect to PC by USB cable
1. With the device powered off, connect the USB cable to the USB port on the base of the device.
 2. Connect the other end of the USB cable to a computer or an USB charging source. (Refer to P.2 for LED status)

6. Memory Card Format

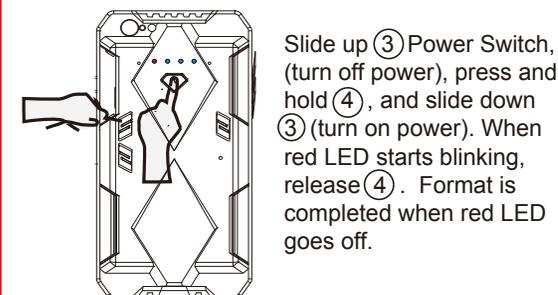


4

7. Date and Time Setting


- 7-1. From the desktop right-click to open Notepad, create a text file named **settime.txt**.
 - 7-2. On the first line of the file, enter date and time information as year.month.day hours.minutes.seconds. For example, suppose the time is October 16, 2015 15:00. Then enter 2015.10.16 15:00:00
- Note :** There should be a space left between day and hours, and the time format should be the 24-hour format.
- 7-3. Save the file to the root directory of the memory card.
 - 7-4. Insert the memory card into the slot, and power on the device. The date and time setting is now completed.
- Note :** The **settime.txt** file will be invisible in the card if the setting is successfully applied on the device.

8. Operation

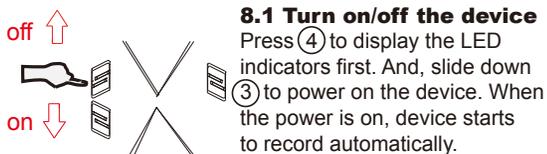

- Red LED blinks 1 time - memory card isn't inserted.
- Red LED blinks 3 times and device turns off - storage of the memory card is full.
- Red LED is steadily on - device is recording.

5

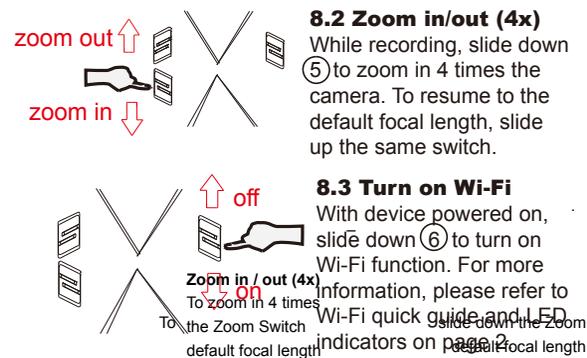

8.2 Zoom in/out (4x)
While recording, slide down (5) to zoom in 4 times the camera. To resume to the default focal length, slide up the same switch.

8.3 Turn on Wi-Fi
With device powered on, slide down (6) to turn on Wi-Fi function. For more information, please refer to Wi-Fi quick guide and LED indicators on page 2.

8.4 Reset the device
If your device functions abnormally, please reset it by pressing (7) while the power is on. When the red LED goes off, the reset is completed.

8.5 Restore the default Wi-Fi password/ SSID
If you forget your new password, press (8) for 4 seconds. The password (88888888) and SSID will be restored to default setting.

8.6 Restore all the default settings
If you want to restore the device to the default setting, press (8) for 10 seconds and release. When red LED blinks three times and goes off, default setting is restored.

6

9. Rename the device Wi-Fi SSID

To change the default SSID name, right-click on Windows desktop. Create a Notepad ***.txt (text)** file and name it as **setSSID.txt**. Enter your new SSID name on the first line of the file, and save the file to the root directory of the memory card.

Note: SSID name must be started with PV and followed by 6 ~ 14 characters of numbers or alphabets (e.g. PV123abc).

10. Download videos to PC


With memory card inserted in the device, connect it to PC with USB cable. Power on the device and the removable disk of the memory card will appear on your PC for you to view and download video files.

11. Others

- 11.1 Device will always resume to normal recording mode everytime it's powered on.
- 11.2 With no memory card inserted, the device can work as web camera when it's connected to PC by USB cable.

7

PV-IP6HDW Smartphone Extended Battery Case DVR Quick Guide

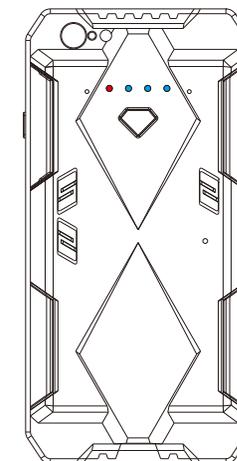

LawMate, innovation never stops

LawMate®